

Programming Menu and Explanation

CTC-911B Control Panel

MAIN MENU	SUB MENU	PROGRAMMING DESCRIPTION
-----------	----------	-------------------------

WALK TEST	>	Walk Test	>	To test if all the sensors connected to the Control Panel are functioning properly
------------------	---	------------------	---	------------------------------------------------------------------------------------

TEL.SETTINGS	>	Tel. Numbers	>	Set, Change and Delete numbers	Add your Emergency Telephone Numbers in order of Preference
---------------------	---	---------------------	---	---------------------------------------	--------------------------------------------------------------------

		Messages	>	Play Message Record Msg	Play and Record your address message Plus 4 other messages Burglar, Fire, Personal attack and Emergency
--	--	-----------------	---	--------------------------------	-------------------------------------------------------------------------------------------------------------------

GEN.SETTINGS	>	Pin Code		Enter; change and text name your pin code
		Temp. Code		Temporary code one arm and one disarm function only
		Duress Code		Not activated as factory default but can be used
		Master Code		Master code for programming only enter new code /change
		A. Entry Time		Entry time for disarming 0/10/20/30 sec up to 70 seconds
		A. Exit Time		Entry time for arming 0/10/20/30 sec up to 70 seconds
		H. Entry Time		Entry time home disarming 0/10/20/30 sec up to 70 seconds
		H. Exit Time		Entry time home arming 0/10/20/30 sec up to 70 seconds
		Door Chime		Door Contact set to chime on entry low/high/off
		Ring Tone		Control panel incoming call ringer on/off
		Time		Set the time by using the up and down arrow keys
		Date		Set the date by using the up and down arrow keys
		Panel Siren		Turn on/off the Main Control Panel Siren
		Alarm Length		Control panel siren length set from 1 to 15 minutes
		A. Exit Sound		Short beep sounds when armed low/high or off
		A. Entry Sound		Short beep sounds when disarmed low/high or off
		H. Exit Sound		Short beep sounds when Home armed low/high or off
		H. Entry Sound		Short beep sounds when Home disarmed low/high or off
		Siren Delay		Siren delay off/1 to 10 minutes
		Final Door		Door contact on main door cannot arm until closed: on/off
		Interference		Signal jamming detection on/off
		RC Entry		Key fob controller ability to disarm the system on/off
		Mobility Chk		Enable or Disable the mobility timer 4/8 or 12 hours
		Tamper Alarm		Set tamper control for all devices. arm mode only/ normal
		Chk Tel. Line		Continuously checks the phone line status on/off
		Supervision		Check all sensors are working. disable 4/6/8/12 hours

DEVICES +/- >

- Add Device
- Edit Device
- Remove Device

From here you can add devices and name them, edit devices and remove a device altogether

Program Siren > **Learn Siren**

NOTE: Siren cannot be learnt in unless you have at least 1 device already in the system.
Refer to Siren instruction paperwork.

Siren Tamp. On

Will automatically revert to on after 1 hour if you forget to activate

Siren Tamp. Off

Make sure you turn tamp off when you need to change batteries

Confirm On

Away arming confirmation beeps from the siren. 1 beep

Confirm Off

No conformation beeps.

Entry Snd On

Disarming conformation beeps from the siren. 2 beeps

Entry Snd Off

No conformation beeps.