

Programming Menu and Explanation

CTC-918B GSM/sms Control Panel

MAIN MENU SUB MENU PROGRAMMING DESCRIPTION

WALK TEST > Walk Test >

To test if all the sensors connected to the Control Panel are functioning properly

TEL.SETTINGS > Tel. Numbers > **Set, Change and Delete numbers**

Add your **Emergency Telephone Numbers** in order of Preference

Messages > **Play Message Record Msg**

Play and Record your address message Plus 4 other messages **Burglar, Fire, Personal attack and Emergency**

GEN.SETTINGS > **Pin Code**
Temp. Code
Duress Code
Master Code
A. Entry Time
A. Exit Time
H. Entry Time
H. Exit Time
Door Chime
Time
Date
Panel Siren
SMS Filter

Enter; change and text name your pin code
Temporary code one arm and one disarm function only
Not activated as factory default but can be used
Master code for programming only enter new code /change
Entry time for disarming 0/10/20/30 sec up to 70 seconds
Entry time for arming 0/10/20/30 sec up to 70 seconds
Entry time home disarming 0/10/20/30 sec up to 70 seconds
Entry time home arming 0/10/20/30 sec up to 70 seconds
Door Contact set to chime on entry low/high/off
Set the time by using the up and down arrow keys
Set the date by using the up and down arrow keys
Turn on/off the Main Control Panel Siren
Sms filter on/off. If turned on the system will only display incoming sms messages containing your keyword

SPC. SETTINGS > **Alarm Length**
A. Exit Sound
A. Entry Sound
H. Exit Sound
H. Entry Sound
Siren Delay
Verification
Final Door
RC Entry
Mobility Chk
Tamper Alarm
Supervision
Set GP-code

Control panel siren length set from 1 to 15 minutes
Short beep sounds when armed low/high or off
Short beep sounds when disarmed low/high or off
Short beep sounds when Home armed low/high or off
Short beep sounds when Home disarmed low/high or off
Siren delay off/1 to 10 minutes
Sequential verification report sent on/off
Door contact on main door cannot arm until closed: on/off
Key fob controller ability to disarm the system on/off
Enable or Disable the mobility timer 4/8 or 12 hours
Set tamper control for all devices. arm mode only/ normal
Check all sensors are working. disable 4/6/8/12 hours
This is to set the pin code of your GSM sim card

DEVICES +/- > Add Device
Edit Device
Remove Device

From here you can add devices and name them, edit devices and remove a device altogether

Program Siren > **Learn Siren**

NOTE: Siren cannot be learnt in unless you have at least 1 device already in the system. Refer to Siren instruction paperwork.

Siren Tamp. On

Will automatically revert to on after 1 hour if you forget to activate

Siren Tamp. Off

Make sure you turn tamp off when you need to change batteries

Confirm On

Away arming confirmation beeps from the siren. 1 beep

Confirm Off

No conformation beeps.

Entry Snd On

Disarming conformation beeps from the siren. 2 beeps

Entry Snd Off

No conformation beeps.

Receiver 1

Add a universal receiver to the system

Receiver 2

To add a second universal receiver

Input Config > **Disable**
Normal open
Normal close

Used to add a wired alarm device to the system
CTC-918B has 1 input/1 output

SMS EDITOR > Enter your text message that you want the system to send to your mobile phone via SMS in the event of an alarm activation

SMS KEYWORD > Used for remote arming/disarming using an sms message. The keyword is recognized by the system as a personalised password.

COUNTRY CODE > Refer to user manual Australian Country code 61

GSM SIGNAL > To test **GSM** signal strength (1-9) **9 being the full signal strength**

RESET GSM > To reset the GSM module